Epson and Windows 10 ARM64

Windows 10 ARM64 will support some Epson printers right out of the box, but all Epson scanners are not supported by Windows 10 ARM64 at this moment.

What is ARM?

ARM is a different type of processor architecture from the standard Intel x86 and 64bit Intel architecture used on PCs today. (Even AMD produces chips that are compatible with Intel's architecture.)

Mobile devices such as iPhone, iPad, and Android phones—along with many other smaller devices—have ARM chips instead of Intel chips inside them.

So why the change to ARM processors?

Low-powered ARM PCs have some advantages over traditional x86 ones (which are most of the desktops and laptops we use today). ARM PCs have built-in LTE cellular connectivity, often offer better battery life than Intel and AMD CPUs, and the hardware is less expensive for manufacturers.

What is Windows 10 ARM?

Microsoft would like Windows 10 to run on ARM hardware so it can reap those benefits. Sure, you probably won't use an ARM desktop any time soon, but ARM could be a great choice for tablets, 2-in-1 convertibles, and even smaller laptops. Rather than creating a more limited version of Windows for this platform, like they did with the failed Windows RT, Microsoft has decided to release a full version of Windows 10 for ARM hardware, one that can even run traditional Windows desktop applications.

The resulting devices are designed to be "Always Connected" and promise up to 20 hours of active use and 700 hours of "Connected Modern Standby". And they can even run traditional Windows desktop software.

Support for Older Hardware Devices May Be a Problem

While Windows 10 on ARM can emulate traditional desktop applications, it won't be able to install hardware drivers written for traditional x86 or x64 Windows operating systems.

It will need ARM versions of those hardware drivers to support different hardware devices.

Microsoft promises that Windows 10 on ARM "will have great device support for USB peripherals using the in-box class drivers". That's great for modern USB peripherals. But read between the lines: Devices that aren't supported by the built-in drivers

won't work. Printer utilities and other hardware driver utilities may not work, either. This could be an issue for older or more obscure hardware peripherals.

When can you expect to buy a ARM powered Device?

Believe it or not, the first Windows 10 on ARM device was the Asus NovoGo, which shipped before the end of 2017. Most ARM-based devices, such as the HP Envy x2 with a Qualcomm Snapdragon 835 processor, were available in 2018, but it is only now where demand is growing and people are switching to this new system. Windows 10 ARM64 will support some Epson printers right out of the box, at the moment all Epson scanners are not supported by Windows 10 ARM64.

upported ows Update driver ows Update driver ows Update driver
ows Update driver
ows Update driver
upported
upported
ows Update driver
upported
upported
ows Update driver
upported
ows Update driver
upported
ows Update driver

Inkjet Printer Support List:

WF-2630 SeriesNot supportedWF-2650 SeriesNot supportedWF-2660 SeriesWindows Update driverWF-2860 SeriesWindows Update driverWF-2860 SeriesWindows Update driverWF-3620 SeriesNot supportedWF-3720 SeriesWindows Update driverWF-6090 SeriesNot supportedWF-7620 SeriesNot supportedWF-7840 SeriesWindows Update driverWF-8590 SeriesNot supportedWF-2000 SeriesWindows Update driverWF-2000 SeriesWindows Update driverWF-25290 SeriesWindows Update driverWF-25290 SeriesWindows Update driverWF-25290 SeriesWindows Update driverWF-2590 SeriesWindows Update driverWF-2698 SeriesWindows Update driverWF-2699 SeriesWindows Update driverWF-2599 SeriesWindows Update driverWF-2529 SeriesNot supportedXP-2100 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-340 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-420 SeriesNot supported<	WF-100 Series	Not supported
WF-2650 SeriesNot supportedWF-2660 SeriesNot supportedWF-2830 SeriesWindows Update driverWF-2860 SeriesWindows Update driverWF-3620 SeriesNot supportedWF-3720 SeriesWindows Update driverWF-6090 SeriesNot supportedWF-7620 SeriesNot supportedWF-7840 SeriesWindows Update driverWF-78590 SeriesNot supportedWF-7590 SeriesWindows Update driverWF-20590 SeriesWindows Update driverWF-20590 SeriesWindows Update driverWF-20600 SeriesWindows Update driverWF-200600 SeriesWindows Update driverWF-21000 SeriesWindows Update driverWF-25290 SeriesWindows Update driverWF-2590 SeriesWindows Update driverWF-26979 SeriesWindows Update driverWF-2898 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-422 445 SeriesWindows Update driverXP-420 SeriesNot supportedXP-420 SeriesNot supported <td></td> <td></td>		
WF-2660 SeriesNot supportedWF-2830 SeriesWindows Update driverWF-2860 SeriesWindows Update driverWF-3620 SeriesNot supportedWF-3720 SeriesWindows Update driverWF-6090 SeriesNot supportedWF-7620 SeriesNot supportedWF-7840 SeriesWindows Update driverWF-8590 SeriesNot supportedWF-20590 SeriesWindows Update driverWF-20590 SeriesWindows Update driverWF-20600 SeriesWindows Update driverWF-200600 SeriesWindows Update driverWF-200750 SeriesWindows Update driverWF-220750 SeriesWindows Update driverWF-220750 SeriesWindows Update driverWF-220750 SeriesWindows Update driverWF-220750 SeriesWindows Update driverWF-25290 SeriesWindows Update driverWF-C2790 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-2698 SeriesWindows Update driverWF-2798 SeriesWindows Update driverWF-8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-15000 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-422 423 425 SeriesNot supportedXP-420 SeriesWindows Update driverXP-420 SeriesWindows Update driverXP-420 SeriesNot supportedXP-420 SeriesWindo		
WF-2830 SeriesWindows Update driverWF-2860 SeriesWindows Update driverWF-3620 SeriesNot supportedWF-3720 SeriesWindows Update driverWF-6090 SeriesNot supportedWF-7620 SeriesNot supportedWF-7840 SeriesWindows Update driverWF-8590 SeriesNot supportedWF-20590 SeriesWindows Update driverWF-20590 SeriesWindows Update driverWF-20590 SeriesWindows Update driverWF-20600 SeriesWindows Update driverWF-2000 SeriesWindows Update driverWF-21000 SeriesWindows Update driverWF-2590 SeriesWindows Update driverWF-2898 SeriesWindows Update driverWF-2898 SeriesWindows Update driverWF-2899 SeriesWindows Update driverWF-2800 SeriesNot supportedXP-2100 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-420 SeriesWindows Update driverXP-424 445 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-420 SeriesNot supportedXP-420 SeriesWindows Update driverXP-420 SeriesWindows		
WF-2860 SeriesWindows Update driverWF-3620 SeriesNot supportedWF-3720 SeriesWindows Update driverWF-6090 SeriesNot supportedWF-7620 SeriesNot supportedWF-7840 SeriesWindows Update driverWF-8590 SeriesNot supportedWF-7840 SeriesWindows Update driverWF-7840 SeriesWindows Update driverWF-7840 SeriesWindows Update driverWF-7590 SeriesWindows Update driverWF-20590 SeriesWindows Update driverWF-C20600 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C878R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-S299 SeriesWindows Update driverWF-S290 SeriesNot supportedXP-15000 SeriesWindows Update driverWF-243 245 247 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-420 SeriesNot supportedXP-420 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-420 SeriesWindows Update driverXP-420 SeriesWindows Update driverXP-420 SeriesWindo		
WF-3620 SeriesNot supportedWF-3720 SeriesWindows Update driverWF-6090 SeriesNot supportedWF-7620 SeriesNot supportedWF-7620 SeriesWindows Update driverWF-8590 SeriesNot supportedWF-20590 SeriesWindows Update driverWF-20590 SeriesWindows Update driverWF-C20600 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C878R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-N5299 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-243 245 247 SeriesNot supportedXP-243 245 247 SeriesNot supportedXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-422 423 425 SeriesNot supportedXP-420 SeriesWindows Update driverXP-620 SeriesNot supportedXP-420 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driverXP-620 SeriesNot su		
WF-3720 SeriesWindows Update driverWF-6090 SeriesNot supportedWF-6090 SeriesNot supportedWF-7620 SeriesWindows Update driverWF-8590 SeriesNot supportedWF-C17590 SeriesWindows Update driverWF-C20590 SeriesWindows Update driverWF-C20600 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20000 SeriesWindows Update driverWF-C20000 SeriesWindows Update driverWF-C20790 SeriesWindows Update driverWF-C20790 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-242 243 245 247 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-422 423 425 SeriesNot supportedXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver <td></td> <td>· · · · · · · · · · · · · · · · · · ·</td>		· · · · · · · · · · · · · · · · · · ·
WF-6090 SeriesNot supportedWF-7620 SeriesNot supportedWF-7840 SeriesWindows Update driverWF-8590 SeriesNot supportedWF-20590 SeriesWindows Update driverWF-C20590 SeriesWindows Update driverWF-C20600 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C21000 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C8978 SeriesWindows Update driverWF-M5299 SeriesWindows Update driverWF-R8590 SeriesWindows Update driverXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-242 243 245 247 SeriesWindows Update driverXP-300 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-424 245 SeriesNot supportedXP-422 423 425 SeriesNot supportedXP-422 423 425 SeriesNot supportedXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver		
WF-7620 SeriesNot supportedWF-7840 SeriesWindows Update driverWF-8590 SeriesNot supportedWF-8590 SeriesWindows Update driverWF-20590 SeriesWindows Update driverWF-C20500 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20000 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-300 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver		
WF-7840 SeriesWindows Update driverWF-8590 SeriesNot supportedWF-C17590 SeriesWindows Update driverWF-C20590 SeriesWindows Update driverWF-C20600 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C20000 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-M5299 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-422 423 425 SeriesNot supportedXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver		
WF-8590 SeriesNot supportedWF-C17590 SeriesWindows Update driverWF-C20590 SeriesWindows Update driverWF-C20600 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C21000 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-M5299 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-422 424 5eriesWindows Update driverXP-600 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver		
WF-C17590 SeriesWindows Update driverWF-C20590 SeriesWindows Update driverWF-C20600 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C21000 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C878R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-R8590 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-243 245 247 SeriesNot supportedXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driverXP-7100 SeriesWindows Update driver		
WF-C20590 SeriesWindows Update driverWF-C20600 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C21000 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C878R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-M5299 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-7100 SeriesWindows Update driverXP-7100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver		
WF-C20600 SeriesWindows Update driverWF-C20750 SeriesWindows Update driverWF-C21000 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-R8590 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-243 245 247 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver		
WF-C20750 SeriesWindows Update driverWF-C21000 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C878R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-M5299 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-424 243 5 SeriesNot supportedXP-420 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver		
WF-C21000 SeriesWindows Update driverWF-C5290 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C878R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-R8590 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-422 425 SeriesNot supportedXP-420 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	WF-C20600 Series	Windows Update driver
WF-C5290 SeriesWindows Update driverWF-C5790 SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C878R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-R5299 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesNot supportedXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesNot supportedXP-422 423 425 SeriesNot supportedXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	WF-C20750 Series	Windows Update driver
WF-C5790 SeriesWindows Update driverWF-C869R SeriesWindows Update driverWF-C878R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-M5299 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesNot supportedXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesNot supportedXP-7100 SeriesWindows Update driver	WF-C21000 Series	Windows Update driver
WF-C869R SeriesWindows Update driverWF-C878R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-M5299 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	WF-C5290 Series	Windows Update driver
WF-C878R SeriesWindows Update driverWF-C879R SeriesWindows Update driverWF-M5299 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	WF-C5790 Series	Windows Update driver
WF-C879R SeriesWindows Update driverWF-M5299 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-2100 SeriesNot supportedXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	WF-C869R Series	Windows Update driver
WF-M5299 SeriesWindows Update driverWF-R8590 SeriesNot supportedXP-R8590 SeriesWindows Update driverXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	WF-C878R Series	Windows Update driver
WF-R8590 SeriesNot supportedXP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	WF-C879R Series	Windows Update driver
XP-15000 SeriesWindows Update driverXP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	WF-M5299 Series	Windows Update driver
XP-2100 SeriesWindows Update driverXP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	WF-R8590 Series	Not supported
XP-225 SeriesNot supportedXP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	XP-15000 Series	Windows Update driver
XP-243 245 247 SeriesWindows Update driverXP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	XP-2100 Series	Windows Update driver
XP-330 SeriesWindows Update driverXP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	XP-225 Series	Not supported
XP-4100 SeriesWindows Update driverXP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	XP-243 245 247 Series	Windows Update driver
XP-422 423 425 SeriesNot supportedXP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	XP-330 Series	Windows Update driver
XP-442 445 SeriesWindows Update driverXP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	XP-4100 Series	Windows Update driver
XP-6100 SeriesWindows Update driverXP-620 SeriesNot supportedXP-7100 SeriesWindows Update driver	XP-422 423 425 Series	Not supported
XP-620 Series Not supported XP-7100 Series Windows Update driver	XP-442 445 Series	Windows Update driver
XP-7100 Series Windows Update driver	XP-6100 Series	Windows Update driver
	XP-620 Series	Not supported
XP-820 Series Not supported	XP-7100 Series	Windows Update driver
	XP-820 Series	Not supported

Model Name	Win10 ARM64 Supported by:
LX-310/350	Windows Inbox driver
LX-1310/1350	Windows Inbox driver
LX-50	Windows Inbox driver
FX-890A	Windows Inbox driver
DFX-9000	Not supported
FX-890II	Windows Inbox driver
FX-890IIN	Windows Inbox driver
FX-2190II	Windows Inbox driver
FX-2190IIN	Windows Inbox driver
FX-2175II	Windows Inbox driver
FX-2175IIN	Windows Inbox driver
LQ-50	Not supported
LQ-300+11	Not supported
LQ-310/350	Windows Inbox driver
LQ-1310	Windows Inbox driver
LQ-590	Windows Inbox driver
LQ-2090	Windows Inbox driver
LQ-630	Not supported
LQ-680Pro	Not supported
LQ-690	Not supported
LQ-2180	Not supported
LQ-2190	Windows Inbox driver
DLQ-3500	Not supported
DLQ-350011	Windows Inbox driver
DLQ-3500IIN	Windows Inbox driver
PLQ-20	Not supported
PLQ-20M	Not supported
PLQ-20D	Not supported
PLQ-20DM	Not supported
PLQ-30	Windows Inbox driver
PLQ-30M	Windows Inbox driver
LQ-59011/209011	Windows Inbox driver
LQ-590IIN/2090IIN	Windows Inbox driver

Laser Printer Support List

MODEL	Win10 ARM64 Supported by:
EPL-6200	Not supported
EPL-N3000	Not supported
AcuLaser2600	Not supported
EPL-N2550	Not supported
AcuLaser M2000/M2010	Not supported
AcuLaser M4000	Windows Inbox driver
AcuLaser M8000	Windows Inbox driver
AcuLaser M2300/M2310/M2400/M2410	Windows Inbox driver
AcuLaser M7000N	Windows Inbox driver
AL-M300D/DN	Windows Inbox driver
AL-M400DN	Windows Inbox driver
AL-M200DN/DW	TBD
AL-M8200/M8100/M7100	Windows Inbox driver
AL-M320DN/M310DN/M220DN	Windows Inbox driver
EPL-5700L	Not supported
EPL-5700i	Not supported
EPL-5800L	Not supported
EPL-5900L	Not supported
EPL-6100L	Not supported
EPL-1220	Not supported
EPL-2020	Not supported
EPL-6200L	Not supported
EPL-2180	Not supported
AcuLaser M1200	Not supported
AcuLaser M1400	TBD
EPL-C8000	Not supported
AcuLaser C8500	Not supported
AcuLaser C4000	Not supported
AcuLaser C8600	Not supported
AcuLaser C1900	Not supported
AcuLaser C4100	Not supported
AcuLaser C9100	Not supported
AcuLaser C2600	Not supported
AcuLaser C4200	Not supported
AcuLaser C3800	Not supported

AcuLaser C2800	Not supported
AcuLaser C9200	Windows Inbox driver
AcuLaser C9300N	Windows Inbox driver
AL-C500DN	Windows Inbox driver
AcuLaser C3900N	TBD
AcuLaser C2900N	TBD
AL-C300	Windows Inbox driver
AcuLaser C7000	Not supported
AcuLaser C3000	Not supported
AcuLaser C1100	Not supported
AcuLaser C1600	тво
AcuLaser C1700	тво
AcuLaser C1750N/W	тво
AL-CX11	Windows Inbox driver
AL-CX21 series	Windows Inbox driver
AcuLaser MX20/MX21 series	Windows Inbox driver
AcuLaser CX28DN	тво
AcuLaser CX16/NF	тво
AcuLaser CX17/NF/NW	TBD
AcuLaser MX14/NF	ТВД
AcuLaser CX29NF	TBD
AcuLaser CX37DN/F	ТВД
AL-MX200DNF/DWF	ТВD

Large Format Printer Support List:

MODEL	Win10 ARM64 Supported by:
SC-B6000 Series	Not supported
SC-B7000 Series	Not supported
SC-B9000 Series	Not supported
SC-F2000 Series	Not supported
SC-F2100 Series	Not supported
SC-F500 Series	Not supported
SC-F6000 Series	Not supported
SC-F6000 Series	Not supported
SC-F6200 Series	Not supported
SC-F7000 Series	Not supported
SC-F7100 Series	Not supported

SC-F7200 Series	Not supported
SC-F9200 Series	Not supported
SC-F9300 Series	Not supported
SC-P10000 Series	Not supported
SC-P10000 Series	Not supported
SC-P10000D Series	Not supported
SC-P20000 Series	Windows Inbox driver
SC-P20000 Series	Not supported
SC-P400 Series	Windows Inbox driver
SC-P5000 Series	Not supported
SC-P600 Series	Windows Inbox driver
SC-P700 Series	Windows Inbox driver
SC-P800 Series	Windows Inbox driver
SC-P8000/P6000 Series	Not supported
SC-P900 Series	Windows Inbox driver
SC-P9000/P7000 Series	Not supported
SC-P9500/P7500 Series	Not supported
SC-P9500/P7500 Series	Not supported
SC-S30600 Series	Not supported
SC-S40600 Series	Not supported
SC-S50600 Series	Not supported
SC-S60600 Series	Not supported
SC-S70600 Series	Not supported
SC-S80600 Series	Not supported
SC-T2100 Series	Not supported
SC-T3000/T5000/T7000 Series	Not supported
SC-T3100D Series	Not supported
SC-T3100X Series	Not supported
SC-T3200/T5200/T7200 Series	Not supported
SC-T3200/T5200/T7200 Series	Not supported
SC-T5100/T3100 Series	Not supported
SC-T5200D/T7200D Series	Not supported
SC-T5200D/T7200D Series	Not supported
SC-T5400/T3400 Series	Not supported
SC-T5400M Series	Not supported
SC-T5405/T3405 Series	Not supported
SC-T5405D Series	Not supported

SC-T5405DM Series	Not supported
Stylus Photo R1800	Not supported
Stylus Photo R1900	Not supported
Stylus Photo R2000	Not supported
Stylus Photo R2400	Not supported
Stylus Photo R2880	Not supported
Stylus Photo R3000	Not supported
Stylus Pro 10600	Not supported
Stylus Pro 11880	Not supported
Stylus Pro 3800	Not supported
Stylus Pro 3880	Not supported
Stylus Pro 4000	Not supported
Stylus Pro 4450	Not supported
Stylus Pro 4800/4400	Not supported
Stylus Pro 4880	Not supported
Stylus Pro 4900	Not supported
Stylus Pro 9400/7400	Not supported
Stylus Pro 9450/7450	Not supported
Stylus Pro 9600/7600/9600-DYE/7600-DYE	Not supported
Stylus Pro 9700/7700	Not supported
Stylus Pro 9800/7800	Not supported
Stylus Pro 9860/9906D	Not supported
Stylus Pro 9880/7880	Not supported
Stylus Pro 9890/7890	Not supported
Stylus Pro 9900/7900	Not supported
Stylus Pro GS6000	Not supported
Stylus Pro WT7900	Not supported
	•